




# Hampton Vanity Desk with Mirror

### PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- Two-adult assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Avoid the use of a power drill as it may cause cracking.

### PARTS INCLUDED:

E – Center Mirror – 1 pc

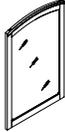

F – Desk Top – 1 pc



G – Desk Leg – 4 pcs



H – Mirror Support – 2 pcs



### HARDWARE INCLUDED:

I – Long Hex Bolt – 8 pcs  
(1/4"x38mm)



J – Short Hex Bolt – 8 pcs  
(1/4"x32mm)



N – Spring Washer – 16 pcs  
(1/4"x15mm)



O – Flat Washer – 16 pcs  
(1/4"x11mm)



R – Allen Key – 1 pc



S – Pan Head Bolt – 1pc  
(5/32"x25mm)



T – Metal Knob – 1pc




### TOOLS REQUIRED (but not included):

- Phillip Head Screwdriver

**ASSEMBLY:**


1. Carefully lay the Desk Top (F) upside down on a carpet or scratch-free surface (the shipping box provides an ideal work surface). Locate the pre-drilled holes in the corner braces on the underside of the Desk Top (F). Insert each Desk Leg (G) into the corner brace making sure the pre-drilled holes in the Desk Leg (G) are aligned with the pre-drilled holes in the corner braces. Insert a Long Hex Bolt (I), Spring Washer (N) and Flat Washer (O) through the corner brace and into the leg. Tighten using the Allen Key (R) as shown below in Figure 1. Repeat until all legs are attached.

Figure 1

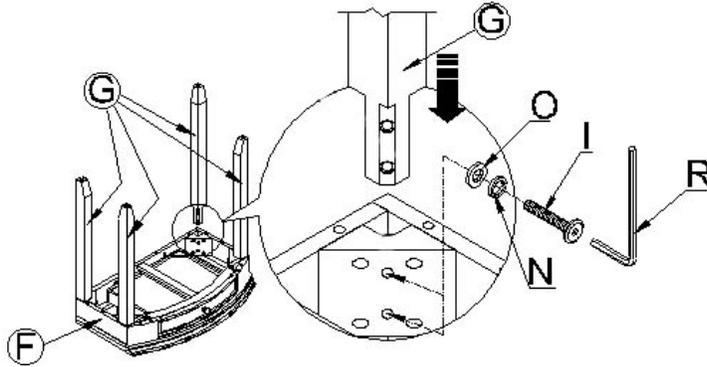


2. Carefully turn the Desk Top upright. Align the pre-drilled holes in the Mirror Support (H) with the pre-drilled holes in the back of the Desk Top (F). Insert Short Hex Bolt (J), Spring Washer (N) and Flat Washer (O) through the Mirror Support (H) and into the Desk Top (F). Tighten using the Allen Key (R) as shown below in Figure 2. Repeat to attach second Mirror Support (H).

Figure 2

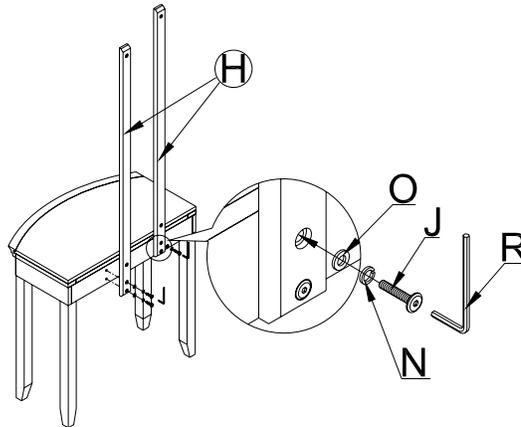


3. Place the Center Mirror (E) on the top of the Desk Top (F), aligning the pre-drilled holes in the Center Mirror (E) with the holes on the Mirror Support (H), as shown in Figure 3. Insert a Short Hex Bolt (J), Spring Washer (N) and Flat Washer (O) through the pre-drilled holes on the Mirror Support (H) and into the pre-drilled holes of the Center Mirror (E). Tighten using the Allen Key (R) as shown below in Figure 3. Repeat with 3 remaining bolts.

Figure 3

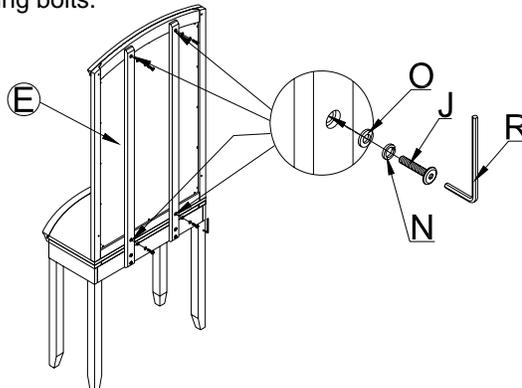

4. Attach the Metal Knob (T) to the drawer by inserting Pan Head Bolt (S) through the pre-drilled hole in the interior of the drawer into Metal Knob (T) as shown below; tighten using a Phillips Head Screwdriver. To level the piece, adjust the recessed levelers located at the base of each leg.

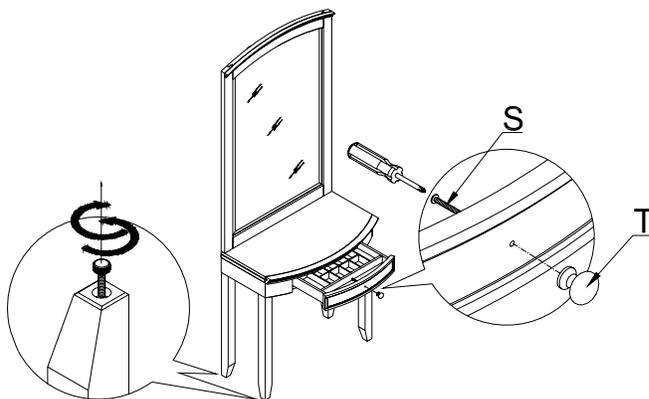

**CARE INSTRUCTIONS:**

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- Hardware should be checked periodically for tightness.







## Hampton Vanity Tower with Mirror

### PRE-ASSEMBLY:


- Please read all instructions before beginning assembly.
- Two-adult assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

### ASSEMBLY:

1. To adjust the shelves unscrew and remove the screws, which are attached to shelf pegs underneath the shelves, with a Phillips Head Screwdriver.
2. Determine desired height for shelves using corresponding peg holes located on the interior of the tower and insert the shelf pegs into the pre-drilled holes until fully secure. Place shelves onto shelf pegs, making sure shelves are stable. Reinsert and tighten screws back into the shelves by inserting the screws through pre-drilled holes of the shelf pegs into underside of the shelf. See illustrations below.

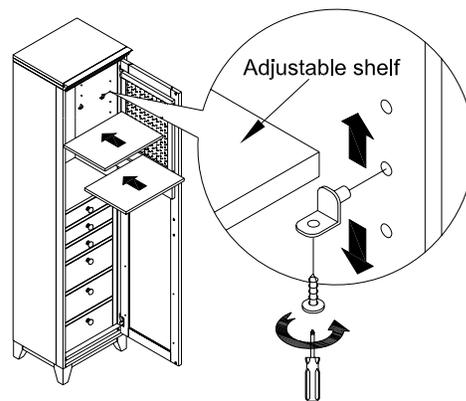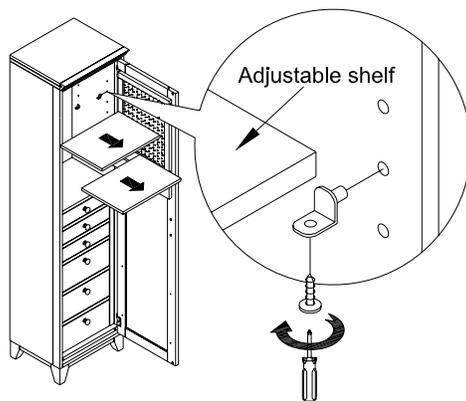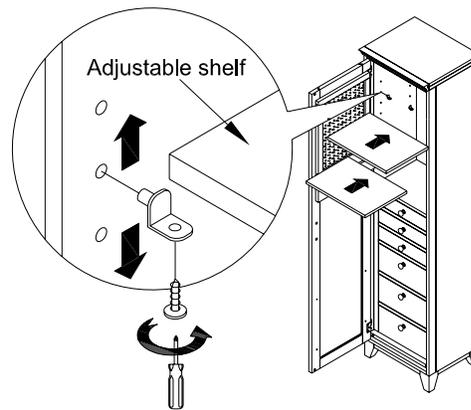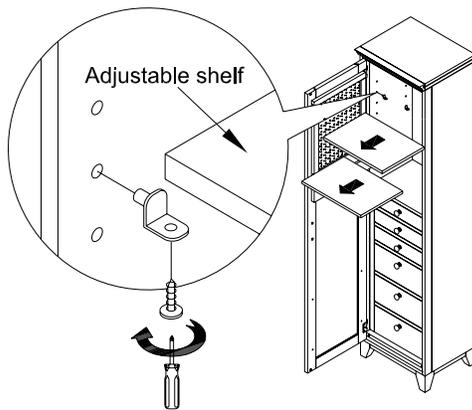

3. Adjust recessed levelers located at the bottom of legs to keep the tower level.
4. Hardware should be checked periodically for tightness.

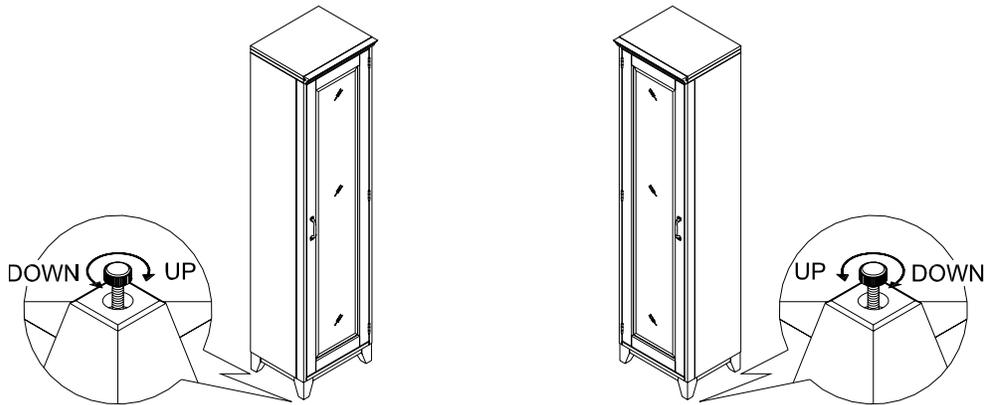

**CARE INSTRUCTIONS:**

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.



# Hampton Vanity Wall System

### PRE-ASSEMBLY:


- Please read all instructions before beginning assembly.
- Two-adult assembly is recommended.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Avoid the use of a power drill as it may cause cracking.

### ASSEMBLED PARTS NEEDED:

Vanity Desk with Center Mirror – 1 set



Left Tower – 1 pc

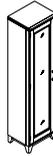

Right Tower – 1 pc



### HARDWARE INCLUDED:

K – Bolt (5/32"x16mm) – 8 pcs



Q – Mending Plate (76x16x2mm) – 4 pcs





### TOOLS REQUIRED (but not included):

- Phillip Head Screwdriver

### ASSEMBLY:

1. Determine the final position of the wall system. Align the pre-drilled holes on the top of the assembled Vanity Desk with Center Mirror side by side with the pre-drilled holes on the top of the Left/Right Tower as shown below in Figure 1. Attach Mending Plate (Q) by inserting one Bolt (K) through the Mending Plate (Q) into the Vanity Desk with Center Mirror and another Bolt (K) through the Mending Plate (Q) into the Left/Right Tower; tighten using a Phillip Head Screwdriver as shown below in Figure 1.1. Please Note: To ensure the Vanity Desk with Center Mirror and the Left and Right Towers are level, adjust the levelers at the bottom of each piece.

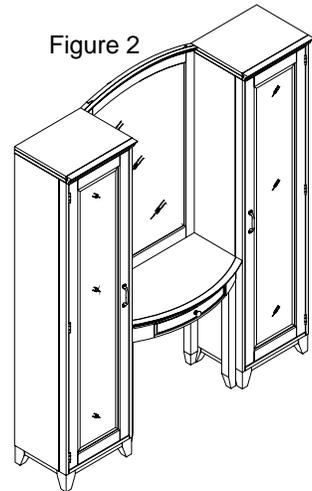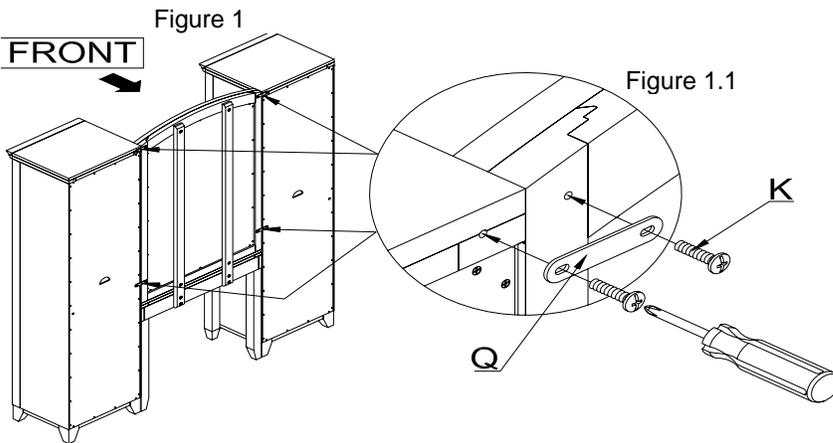

### CARE INSTRUCTIONS:

- Avoid direct sunlight and excessive temperatures.
- Dust often using a clean, soft, dry and lint-free cloth.
- Waxing is not recommended on lacquered finish.
- Hardware should be checked periodically for tightness.



## FURNITURE TIPPING RESTRAINT

**WARNING:** This product is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws, brackets or straps.

Young children may be injured by tipping furniture and the use of a tipping restraint is highly recommended.




When properly installed, this restraint could provide protection against the unexpected tipping of furniture. We recommend mounting this restraint to a wall stud.

Hardware included:

- (2) Brackets 48 x 21 x 10mm
- (1) Nylon Strap 300 x 12 x 8mm
- (2) Stud Mounting Screws 6 x 32mm
- (2) Product Side Mounting Screws 6 x 19mm

Note: For safe mounting it is essential to use the proper hardware for your wall type. The included hardware is for drywall or stud mounting only. For other wall types (ie: plaster, concrete, brick...) please consult your local hardware store.

1. Determine the final resting position of the furniture piece. Mark location on the wall approximately 1" below the top of the back of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.
2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame.
3. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.
4. Check to be sure the wall bracket is firmly screwed into wall stud and the furniture bracket is firmly attached to the frame.
5. Move the piece of furniture into its final position so that the wall bracket and furniture bracket are in alignment.
6. Thread the strap through brackets and tighten until snug. Do not over-tighten.
7. Check to make sure the brackets are firmly installed and the strap is secure.

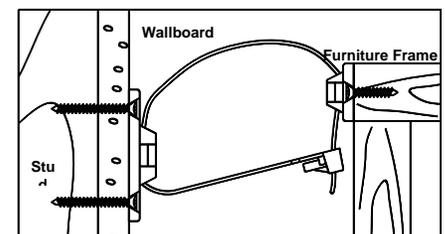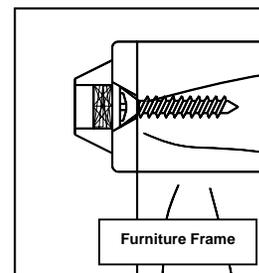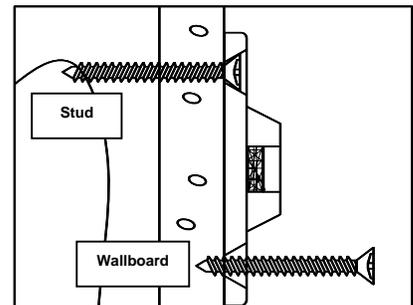

Completed Anti-tip Kit Installation