

Beauty Cabinet


Note: This hanging system is meant for dry wall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance. For safety and ease of mounting, installation is recommended using two people.

Tools needed:

- Stud Finder, Phillips screwdriver, Pencil

Hardware Included:


- (1) Wall Cleat with Bubble Level
 - (1) Stud Mounting Screw (Short with Sharp Tip)
 - (2) Toggle Anchors
 - (2) Toggle Screws (Long with Blunt Tip)
- (The Toggle Anchors and Toggle Screws are meant for Dry wall only)*

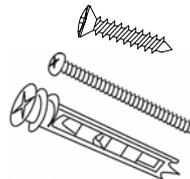

Stud Mounting Screw

Toggle Screw

Toggle Anchor

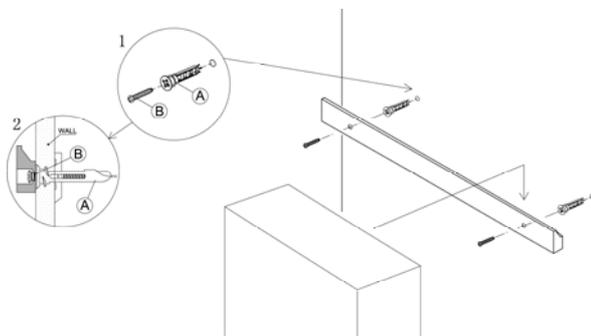

other long thin tool such as the long toggle screw) to mark the wall through the other hole of the cleat. If no studs align with the cleat holes, mark the wall through both cleat holes and then set the cleat aside.

Mounting Instructions:

1. Determine the desired placement on the wall for the product and draw a straight and level line about 14 inches long using the pencil.
 2. Use a stud-finder to locate any vertical studs that intersect with this line and mark these locations along the line.
 3. Position the wall cleat against the wall so that the sharp edge of the cleat touches the line. If possible, move the cleat left or right to position one of the two holes of the cleat over a stud location mark and then use a sharp pencil (or other long thin tool such as the long toggle screw) to mark the wall through the other hole of the cleat. If no studs align with the cleat holes, mark the wall through both cleat holes and then set the cleat aside.
- Note: Owing to the short length of the cleat, only one cleat hole could align with a stud. If it does, use only a stud screw at this location. For non-stud aligning holes, use the toggle anchor and toggle screw.**
4. Use the screwdriver to engage the recess of a toggle anchor and position the sharp tip of the anchor against a non-stud- aligning mark. Rotate the toggle clockwise and push the toggle gently into the wall. The toggle will self-drill into the drywall as you rotate it. Continue rotating until the wide flange of the toggle meets flush with the wall surface. Do not rotate beyond this point. Repeat this step using the other toggle and the other mark, if the other mark does not align with a stud.
 5. Position the wall cleat against the wall so that the holes align with either both or one installed toggle anchor. It is VERY important that the sharp edge of the cleat is facing up and away from the wall (see Fig. 2).
 6. Use the screwdriver to install a long toggle screw into a cleat hole that aligns with an installed toggle and rotate the screw until it engages the toggle and become tight (be patient here – this will require several rotations). Repeat this step with the other hole and installed toggle (if no stud align with either cleat hole).
 7. If one of the holes aligns with a stud, use the screwdriver to secure the short screw directly into the wall and wall stud. Use the level beforehand to ensure that the cleat is still level. Rotate this stud-screw clockwise until it becomes tight and thereby firmly holds the cleat to the wall.
 8. With the help of another person, carefully lift the cabinet against the wall so that the upper rear edge aligns with the wall-mounted cleat. Gently lower the cabinet along the wall until the cleat engages with the cabinet. Gently tap the cabinet down to ensure that the engagement is strong.
 9. Wall-mounting is now complete.